

RATCHET BACK MULTI-FUNCTION

Ratchet Back Height Adjustment

Simply lift back to desired position and back locks automatically. To release and reset back position, lift back completely to top stop and return to bottom stop, adjusts to the new position.

Back Angle Adjustment

While seated, pull paddle up, when desired angle found, push paddle down to lock. Back free floats in the paddle up position.

Pneumatic Height Adjustment

To lower, lift paddle while seated. To raise, lift paddle with your weight off seat.

Infinite Seat Angle Adjustment with 6 degree Forward Tilt

To change seat angle, pull paddle up while seated. Push paddle down to lock when desired angle is achieved. Seat can rock.

Forward Tilt

Lean back in chair and roll or pull lever forward for forward tilt. Roll or spin lever backward for flat position during rocking. Attention: lever can only be moved when in a rear rocking position.

Tension Knob

Turn clockwise to increase tension, turn counter-clockwise to decrease tension.

Seat Slider (optional)

While seated, pull lever, adjust seat to desired depth and release lever to lock. Locks in 5 positions over 2 1/2 inches.

